User Guide

TI1200

Safety Information

Please read this manual carefully before using the TI1200 and retain for further reference.

Safety Warning

Placement

- Do not expose the unit to direct sunlight and other sources of heat.
- Do not handle liquids near or on the unit.
- Never spill liquid of any kind on the unit.
- Do not put the unit near appliances that create magnetic fields.
- Do not put heavy objects on top of the unit.

Power Supply

- Make sure the USB power supply can offer 5V/1.5A. If not please use a 5V/1.5A output AC adapter instead (not included).
- Please unplug power supply and aerial plug when there is thunder-storm or lighting.
- Please unplug the power supply when there is no body at home or not used for a long period of time.
- Please keep Micro USB cable from physical or mechanical damage.
- Please use exclusive Micro USB cable, do not modify or lengthen it.

Safety Warning

Temperature

- Do not place the unit near or over a radiator or a heater register.
- If your unit is suddenly moved from a cold to a warm place, unplug the power cord for at least two hours until moisture removed.

Humidity

- Do not expose unit in rain damp or place near water.

Ventilation

- Keep the ventilation opening clear.
- Ensure that the unit has enough space for ventilation around.

Recycling

- If at any time in the future you need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Included in the Box

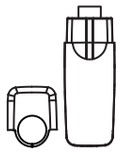

Smart Dongle

Remote

Remote receiver

User manual



Micro USB

Interface

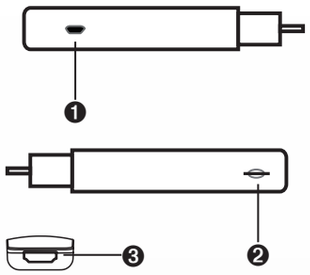

❶ Micro USB port
❷ Micro SD card slot
❸ Male HDMI port
❹ USB port

Remote

Go Home

Home

Options (app settings)

Volume Up/Down

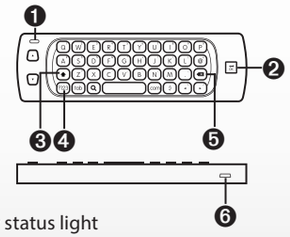

❶ Battery status light
❷ Enter/Return key
❸ Caps lock key
❹ Numbers/Symbols key
(Hold down for entering numbers and symbols)
❺ Delete key
❻ Micro USB charging port

Remote Operating

IR learning function on your TV power On/Off

App menu hold for 3 seconds to navigate between most recent apps.

Move through the menu options.

Select hold and drag to scroll/move.

What you Need

High definition (HD) TV with an available HDMI port.

802.11b/g/n Wi-Fi wireless network or 10/100 /Base-T Ethernet network (requires adapter, not included.

A high speed Internet connection (DSL, cable or LAN).

Login information.

User names and passwords needed to access Wi-Fi, apps (Facebook, Gmail, Spotify etc...)

We reserve the rights to change the technical data and the design of the product without notice as a result of further development.

Charging the Remote

1. Connect the USB cable to a USB port on your TV.
2. Connect the micro USB cable end to the micro USB port on the remote.
3. Remote is fully charged when light turns solid blue.

Note:
Blue light indicates fully charged.
Blue blinking light indicates power is low.
Red light indicates charging.

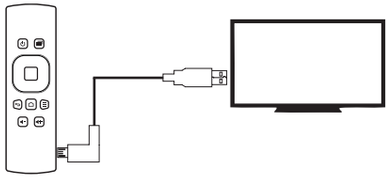

Connecting to a TV

1. Connect the USB cable to 5A-1A USB port on your TV.
2. Connect the micro USB end to the micro USB port on the Smart Dongle.
3. Plug the Smart Dongle into the HDMI port of your TV.
   If it is difficult to access the HDMI port, use a HDMI extension cable (not included).
4. Set your TV or home theatre receiver to the HDMI input where the Smart Dongle is connected.

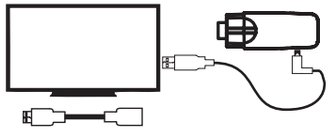

HDMI cable not included

Settings

1. With the remote, click the *SETTINGS*.
2. Click the *SETTING* and choose Wi-Fi from the options on the left. Make sure the switch is highlighted "On".
3. Select your wireless network.
4. Enter your wireless password (if needed).

On-screen Keyboard

1. Click the *SETTINGS* and choose *DISPLAY* from the option on the left.
2. Create or sign in with your Google account and follow the prompts.

Sensitivity of Remote

1. Click *SETTINGS* and select *LANGUAGE AND INPUTS* from the options on the left. Choose *MOUSE/TRACKPAD > POINTER SPEED*.
2. Slide the sensitivity bar to adjust the speed of the pointer.

Add a Google Account

1. Click *SETTINGS* and select *ACCOUNTS AND SYNC* from the option on the left.
2. Click on *"ADD ACCOUNT"* in the top right corner.
3. Click on *"GOOGLE"* and follow the prompts.

Download and Install Apps

1. Click the *GOOGLE PLAY STORE* the home located at the bottom of screen.
2. Search and select your desired app, click *"INSTALL"*.
3. App will download and icon will appear on your *HOME SCREEN*

Factory Reset

1. Click on *SETTINGS* and choose *BACKUP AND RESET*, then *FACTORY DATA RESET*.
2. Select *"ERASE SD CARD"*, and click on the *"RESET STICK"* button.
3. Reset will take several minutes.
4. If your dongle freezes at boot screen unplug and re-insert power cable.

Trouble Shooting

The Basics
Has your remote been charged?

Are both ends of the USB cable connected to the Smart Dongle and the TV USB or A/C power adapter (not included)?

Is the Smart Dongle securely connected to the HDMI port on your TV, and has it been turned on to the correct HDMI input?

Is the remote control receiver inserted into the USB port at rear of the Smart Dongle?

Are your wireless router and network connections functioning properly?

Have you got correct User Manual/Password for your wireless network?

If you are still having issues try resetting the Smart Dongle and wireless router – wait 30 seconds and reconnect.

Trouble Shooting

Unable to Locate Wi-Fi Network
Make sure your wireless router is functioning properly.

Try resetting the router. Wait 5-10 seconds an try to connect again.

Make sure the correct User Name/Password combination has been entered.

Perform a factory reset.

No Sound
Make sure the volume on the TV is turned up and the mute option is not selected.

Make sure your TV or home theatre receiver is set to the correct HDMI output, where the Smart Dongle is connected.

Make sure the volume on the remote is turned up.

Connect to your Wi-Fi and have the latest update installed.